



Rulon Company
Continuous Wood Cube
Suspended Ceiling
Installation Guide

Rulon Company Continuous Cube Suspended Wood Ceiling System Installation Guide

Step 1

Install 'L' Angle around perimeter of space at final ceiling height. See Figure 1 for possible perimeter treatments.

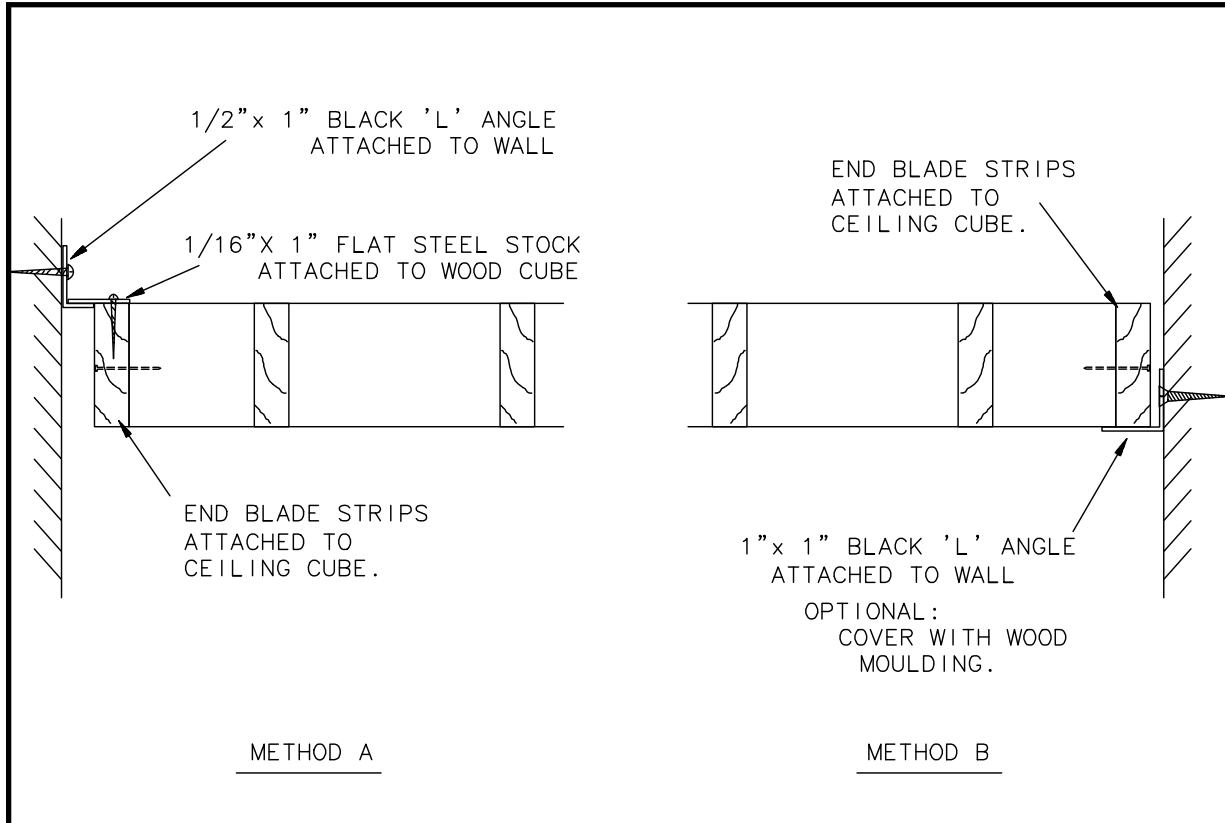


Figure 1

Step 2

Layout and hang main rails at required spacing with #12-ga. wire. Hangers should be placed on 4' centers along the main rails. Screw eyes for wire should be installed within 3" of the intersection of main and cross rails as possible.

Step 3

Hang main rails 2' O.C. Extend main rails using dowels. Insert cross rails.

Step 4

Insert a wood cube assembly between two (2) adjacent main rails. Staple or nail from side or top as needed to maintain vertical and horizontal alignment. Continue installing cross rails and wood cube assemblies, in sequence, across the space.

Rulon Company Continuous Cube Suspended Wood Ceiling System Installation Guide

Step 5

At final cube row, cut end blade strips to fit between main rails. Trim last cube section to fit final opening. Staple or nail end blade strip to cube.

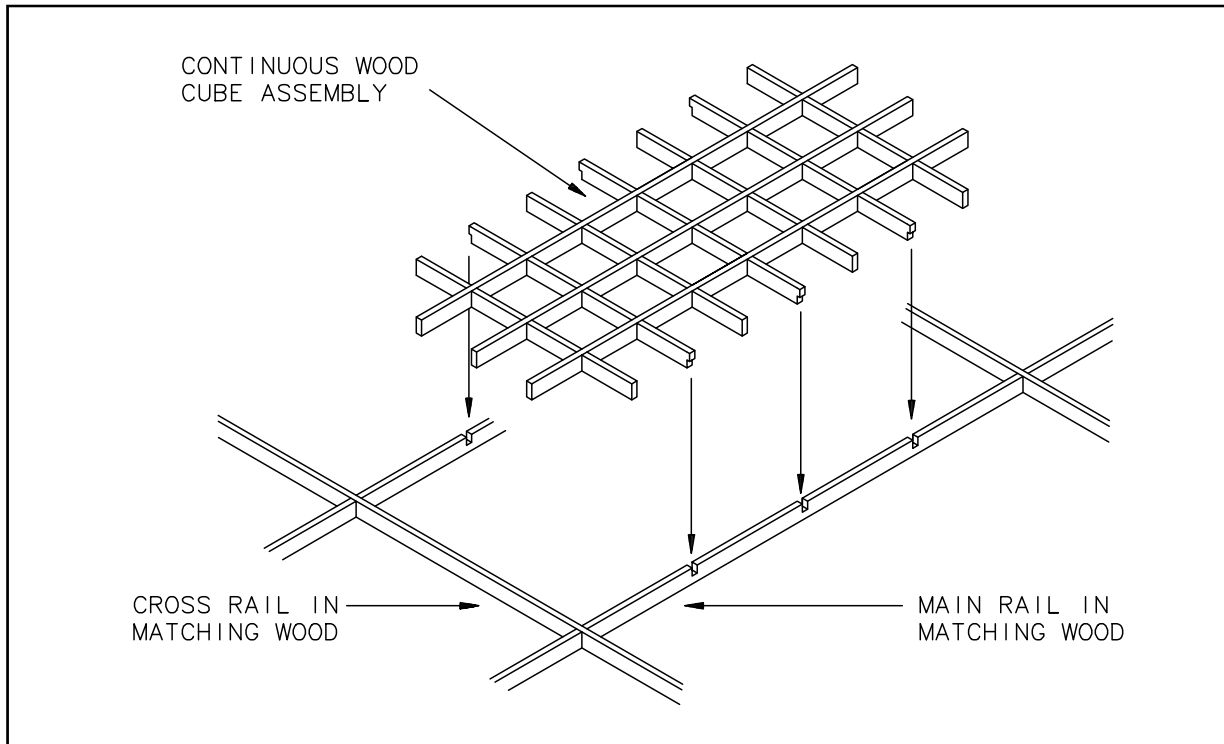


Figure 2

Step 6

- A. The contractor shall make final adjustment to levels and contours.
- B. Upon completion of ceiling installation, all wood cubes and borders must be cleaned free of dirt, dust, grease, oils, and fingerprints. Wood strips shall be wiped with furniture polish to enhance the surface finish.
- C. All work that cannot be successfully cleaned and repaired shall be removed and replaced.